

USE THE COIL CLEANER FOR HVAC SYSTEM


**LET
AIR
FLOW**



THINGS YOU NEED



x1

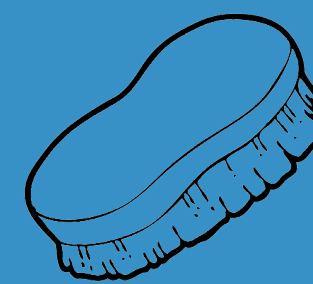

x1




x1

1.




Open the outer casing of the Air-conditioner.

2.

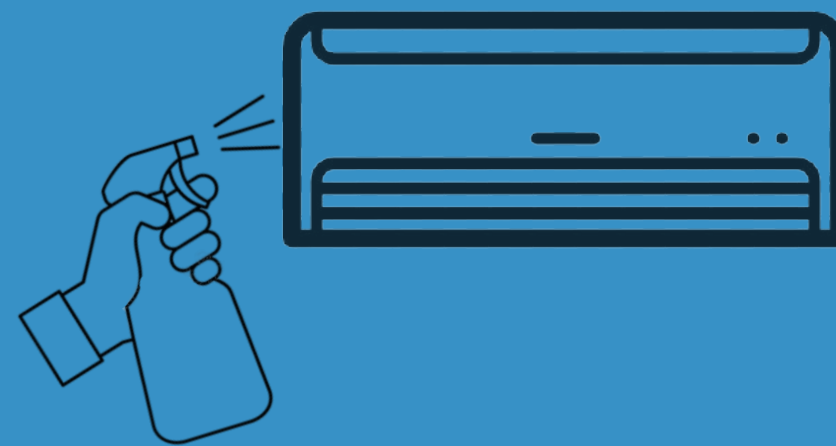

Spray BB-9 on the interior coil or exterior cover.

3.

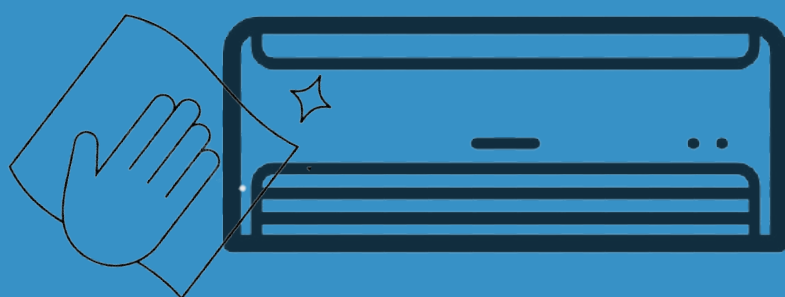

Simply wipe the exterior with a clean cloth.

4.



Clean and dust free Air-con!

**CONTACT US
FOR MORE INFO**

Email:
Kenneth@enlipsum.com

